




WIND GAGE

ET2000e SERIES CONTROLLER WIND GAGE SETUP

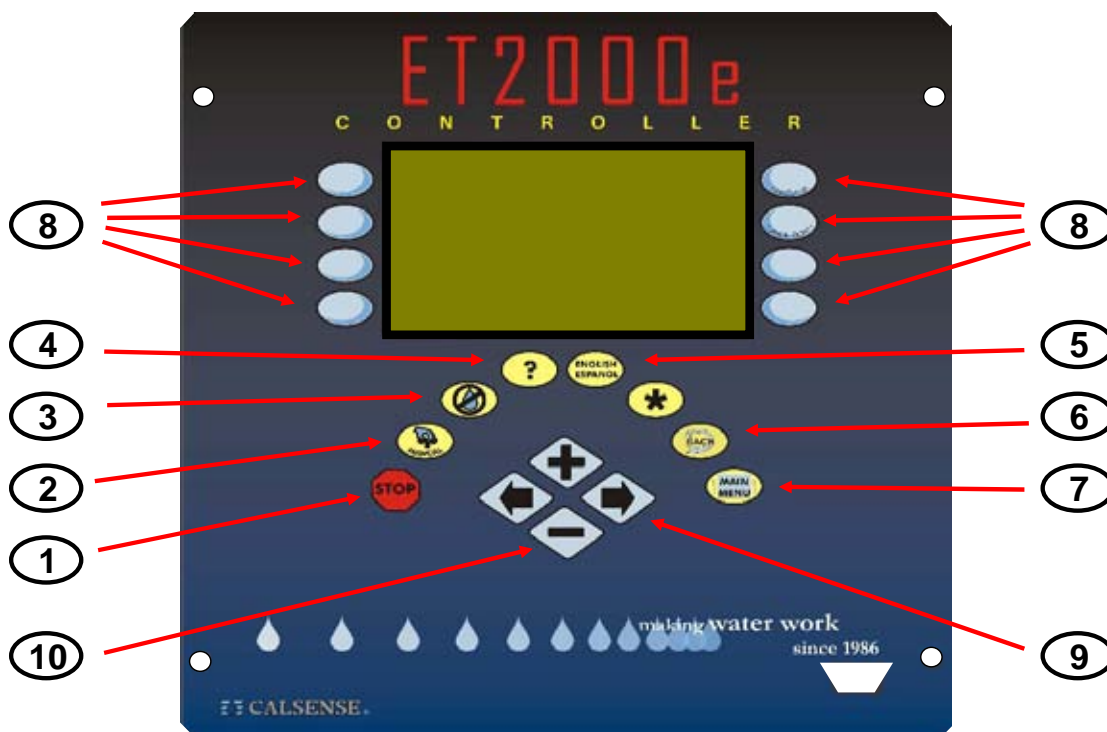

- | | |
|--|---|
| <p>1 STOP – The STOP key will stop any currently running Scheduled watering Cycle, Manual Cycle, Test Cycle, Manual Programs.</p> <p>2 MANUAL – The MANUAL key will perform Manual Water, Test, Master Valve Override and Manual Program 1 & 2, Walk-Thru, and Use Hold Over.</p> <p>3 NO WATER – The NO WATER key will turn the controller Off and set No Water Days.</p> <p>4 ? – The ? key is used to access the controller Help screens.</p> <p>5 ENGLISH / ESPANOL – The ENGLISH / ESPANOL key allows you to toggle the displayed text between English and Spanish.</p> <p>6 BACK – The BACK key will go back to the previous screen.</p> | <p>7 MAIN MENU – The MAIN MENU key is used to access the different program features of the controller.</p> <p>8 MENU KEYS – MENU keys select the different features of commands in the different screens and are adjacent to the left and right side of the controller's display screen. The text in the screen will point towards the MENU key that needs to be pressed.</p> <p>9 LEFT / RIGHT ARROW KEYS – The LEFT / RIGHT ARROW keys move the highlighted cursor around the different screens when setting up or editing the controller's features and options.</p> <p>10 PLUS / MINUS KEYS – The PLUS / MINUS keys increase or decrease values or answer Yes or No questions in the different screens.</p> |
|--|---|

WIND GAGE

1.  Press the **MAIN MENU** key.
2.  Press the **WEATHER** menu key (Figure 1).

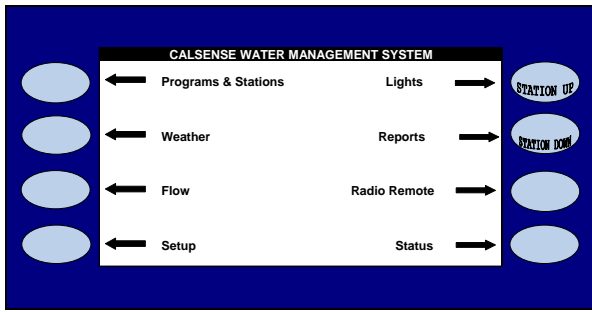


Figure 1

The WEATHER SETUP screen is displayed (Figure 2).

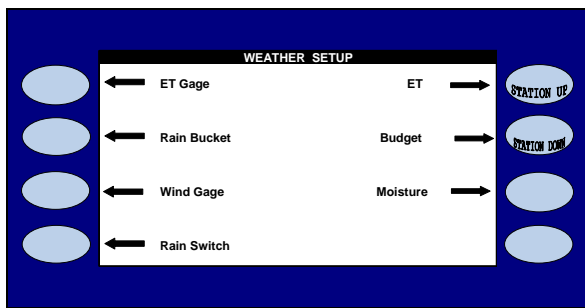



Figure 2

3.  Press the **WIND GAGE** Menu key.

The WIND GAGE SETUP screen is displayed (Figure 3).

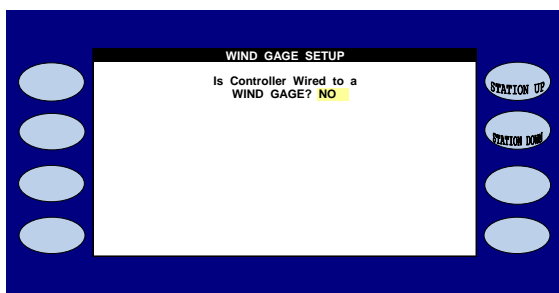



Figure 3

The default setting is NO. If you are currently using a wind gage on this controller then change the setting to YES.

4.  Press the **PLUS** or **MINUS** keys to change the settings.

The WIND GAGE SETUP screen will change to reveal the irrigation wind settings (Figure 4).

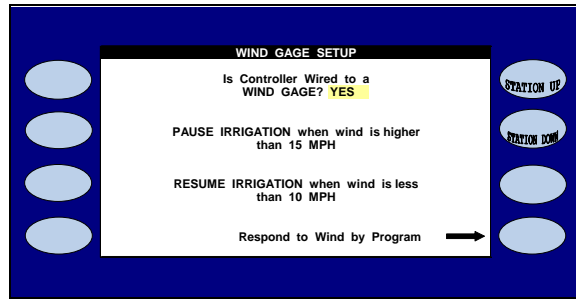



Figure 4

5.  Press the blue **ARROW** keys to move the cursor to the next entry.

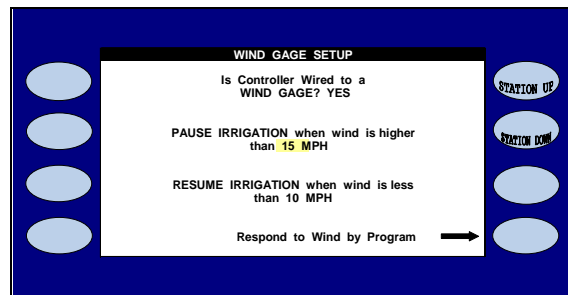




Figure 5

To change the Miles Per Hour that you want the irrigation to pause at,

6.  Press the **PLUS** or **MINUS** keys (Figure 5).

7.  Press the blue **ARROW** keys to move the cursor to the next entry.

To set the Miles Per Hour that you want the controller to resume irrigation at, (Figure 6).

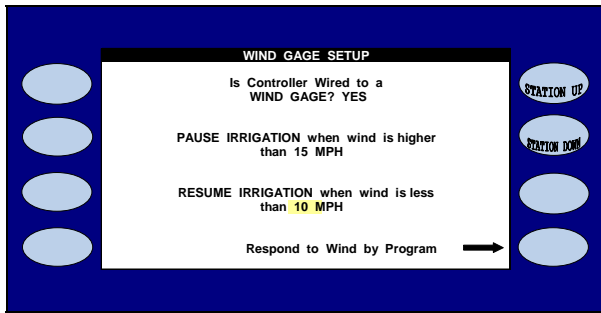




Figure 6

8.  Press the **PLUS** or **MINUS** keys to change the speed (Figure 6).
9.  Press the **RESPONSE TO WIND BY PROGRAM** Menu key.

The USE OF WIND BY PROGRAM screen is displayed (Figure 7).

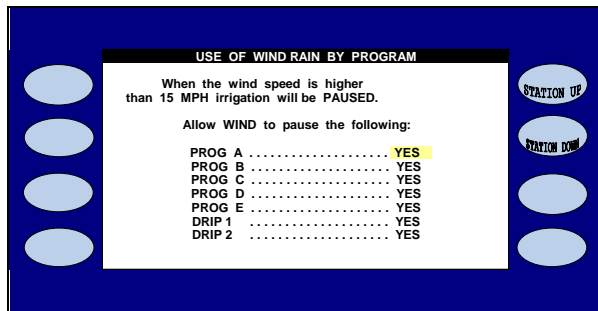





Figure 7

You can select the programs that you want to be affected by wind. The default setting is YES. If you **do not** want programs to be effected by wind change the setting to NO for the appropriate program.

10.  Press the **PLUS** or **MINUS** keys to change the settings.
11.  Press the blue **ARROW** key to move the cursor to the next entry.
12.  Press the **MAIN MENU** key to return to the MAIN MENU screen (Figure 1).



2075 Corte del Nogal, Suite P, Carlsbad CA 92011
1-(800)-572-8608 FAX: 1-(760)-438-2619
www.calsense.com

Stock Number: PG1-WG-D4

Rev. 04/06



making water work

since 1986