


Calsense POC (model CS-2W-POC) Decoder Installation

Use 3M Scotchcast #3570G-N epoxy packs for **ALL** wire splices.

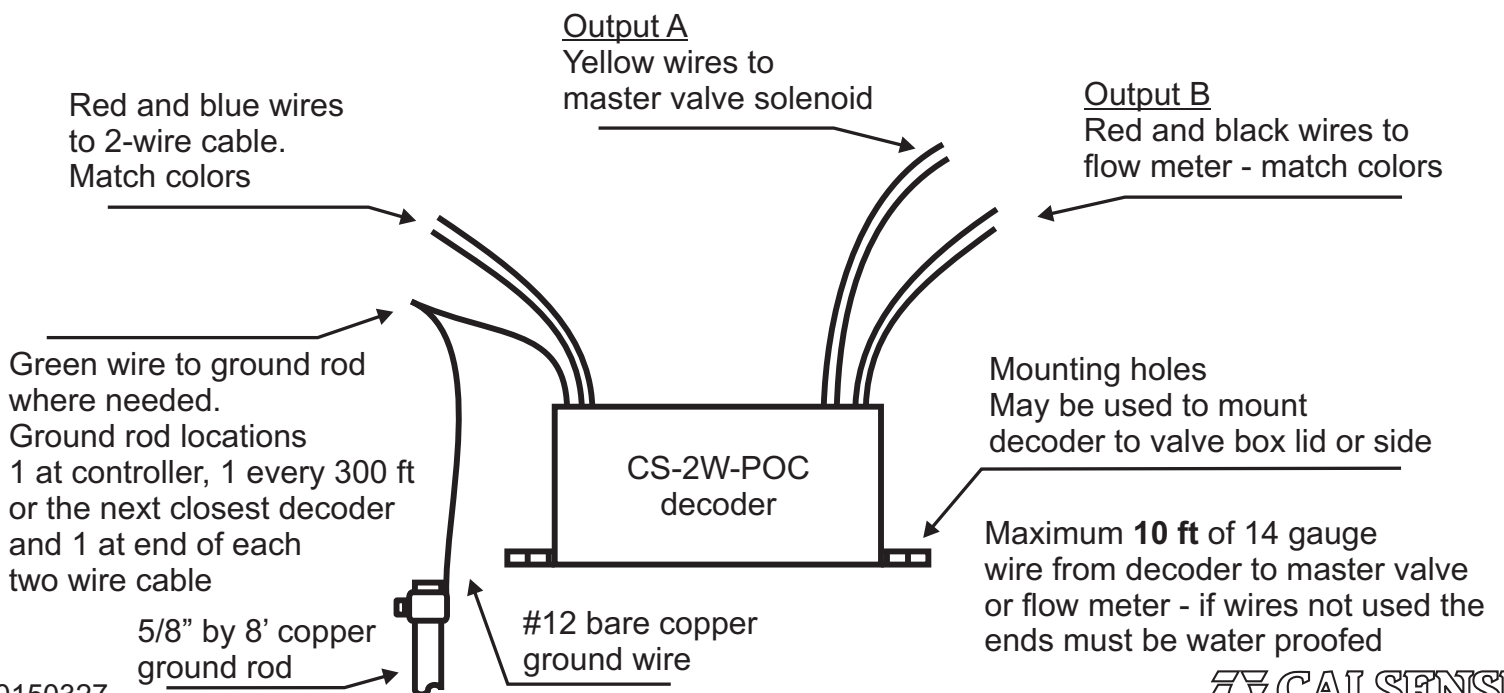

Rev 20150327

CALSENSE®